

The Dino's Air Fighter-RC is a larger version of the Air Fighter-S


Description:

The Air Fighter-RC is a larger version of the Air Fighter-S. This allows greater versatility while using minimal number of tools. The Air Fighter-RC slides between the car door and the weather stripping on the doorframe. Once the pump is squeezed, inflating the Air Fighter-RC, the car door separates from the frame. This allows plenty of room to insert a car-opening tool. The Air Fighter-RC can also be used for installing windows and doors, and holding doors open while installing door hardware. The Air Fighter-RC is equipped with a bulb pump and release valve for quick and easy inflating and deflating.

For Automotive Openings

Operation:

1. Insert the deflated Air Fighter-RC between the door and the weather-stripping at the top corner of the car door furthest from the hinges.
2. Squeeze the pump to inflate the Air Fighter-RC creating a gap between the door and the weather stripping.
3. Insert a car-opening tool below the Air Fighter-RC and unlock the vehicle.
4. Press the release valve to deflate.

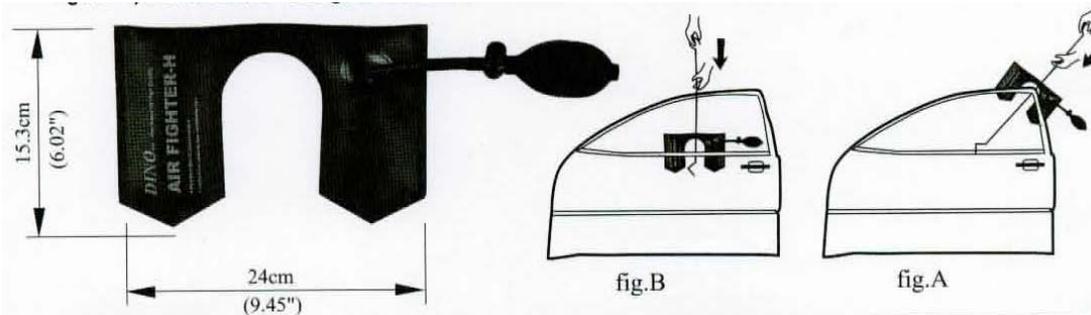

The Dino's Air Fighter-U is a larger version of the Air Fighter-S

Description:

The Air Fighter-U is a larger version of the Air Fighter-S. This allows greater versatility while using minimal number of tools. The Air Fighter-U slides between the car door and the weather stripping on the doorframe. Once the pump is squeezed, inflating the Air Fighter-U, the car door separates from the frame. This allows plenty of room to insert a car-opening tool. The Air Fighter-U can also be used for installing windows and doors, and holding doors open while installing door hardware. The Air Fighter-U is equipped with a bulb pump and release valve for quick and easy inflating and deflating.

For Automotive Openings

Operation:

1. Insert the deflated Air Fighter-U between the door and the weather-stripping at the top corner of the car door furthest from the hinges.
2. Squeeze the pump to inflate the Air Fighter-U creating a gap between the door and the weather stripping.
3. Insert a car-opening tool below the Air Fighter-U and unlock the vehicle.
4. Press the release valve to deflate.



The Dino's Air Fighter-SQ is a larger version of the Air Fighter-S

Description:

The Air Fighter-SQ is a larger version of the Air Fighter-S. This allows greater versatility while using minimal number of tools. The Air Fighter-SQ slides between the car door and the weather stripping on the doorframe. Once the pump is squeezed, inflating the Air Fighter-SQ, the car door separates from the frame. This allows plenty of room to insert a car-opening tool. The Air Fighter-SQ can also be used for installing windows and doors, and holding doors open while installing door hardware. The Air Fighter-SQ is equipped with a bulb pump and release valve for quick and easy inflating and deflating.

For Automotive Openings

Operation:

1. Insert the deflated Air Fighter-SQ between the door and the weather-stripping at the top corner of the car door furthest from the hinges.
2. Squeeze the pump to inflate the Air Fighter-SQ creating a gap between the door and the weather stripping.
3. Insert a car-opening tool below the Air Fighter-SQ and unlock the vehicle.
4. Press the release valve to deflate.