

****Reusable Balloons****
Important Information Please Read

Please note that while this product can be used any time of the year it is sensitive to air density.

In colder weather air in the Balloons will contract causing the balloon to slightly deflate. Filling the balloon all the way will help it stay inflated. Slight deflation does not mean the Balloon is defective. To test the Reusable Balloon for leaks leave in a controlled climate (such as an office).


It is recommended to remove the balloon holder from the pole when re-inflating the balloon.

For an instruction video please go online to:
www.youtube.com/ezletteringservice

If you should have any questions or comments regarding this product please contact us.

E-Z **INSTRUCTIONS**

REUSABLE BALLOON GROUND SPIKE KIT

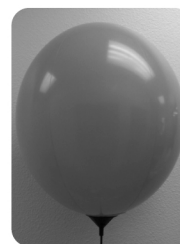

E-Z LETTERING® SERVICE
The Greatest Name in Auto Dealer Products

723 Ohms Way, Costa Mesa, CA 92627

Toll Free (800) 422-8442 Telephone (949) 646-8441

Fax (949) 631-4267 sales@ezlettering.com

www.ezlettering.com

Complete Kit Includes:

- 1 - Ground Spike**
- 1 - 35" Tall Sturdy Aluminum Pole**
- 1 - 30" Reusable Balloon Holder**
- 1 - Reusable Balloon**
- 1 - Balloon Adapter Clip**

REUSABLE BALLOON GROUND SPIKE KIT

Part#EZ 524

STEP 1



1-Reusable Balloon

1. Fill Balloon with air to about 85% full.

Part#EZ 524

STEP 4



Reusable Balloon

4. Continue to fill balloon. Although it may seem full at 100% continue to fill approximately 20%-25% more to reach ideal size and shape.

Part#EZ 526

STEP 2



1-Balloon Adapter Clip



2. Take Clip & attach to bottom of Reusable Balloon. Stretch balloon handle to attach Clip securely.



Part#EZ 547

STEP 5



1-35" Aluminum Pole

5. Twist and lock Balloon Holder into top of pole.


Part#EZ 534

STEP 3



Attach to Balloon Adapter Clip

1-30" Reusable Balloon Holder

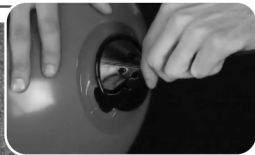

3. Attach 30" Balloon Holder to Adapter Clip on Reusable Balloon.

Part#EZ 548

STEP 6



1-Ground Spike



6. Conveniently use your foot or a hammer to implant the spike into the ground. Insert Aluminum Pole into Ground Spike holder.